 


LUXBURG User Manual

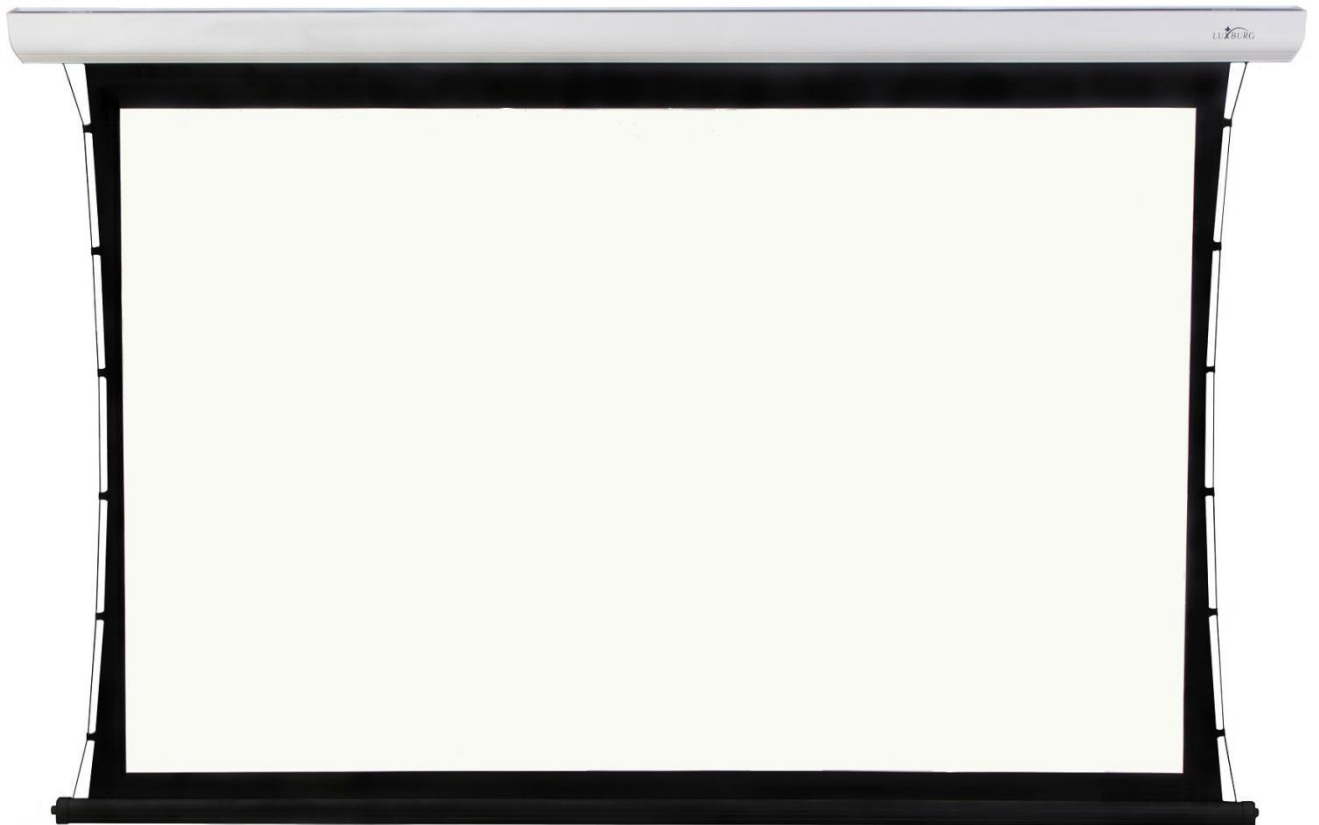

Tensioned Screens

Website: www.luxburgvisual.com



Email: support@luxburgvisual.com

Tel: 0044 207 237 4842

Table of Contents

SAFETY INFORMATION.....	3
IMPORTANT SAFETY INSTRUCTION	3
SETTING UP THE SCREEN	4
POSITIONING THE SCREEN.....	5
USING THE SCREEN	6
Operating Instructions	6
Troubleshooting.....	6
ADDITIONAL INFORMATION	7
Cleaning the screen.....	7
WARRANTY AND COPYRIGHT INFORMATION.....	7
Warranty	7
Copyright.....	7
Disposal.....	8

SAFETY INFORMATION

	Do not attempt to disassemble any part; this could lead to a shocking hazard
	This product is extremely flammable

IMPORTANT SAFETY INSTRUCTION

1. Follow all installation instructions. Failing to do so, may lead to serious consequences.
2. Misuse of the screen may cause damage to the screen itself or cause personal injury.
3. Screens must be installed in accordance with the instructions.
4. Ensure that the screen is mounted securely.
5. Operate within specified temperature and humidity range
6. Do not operate screen before it is installed on wall.
7. Make sure that the operating voltage of the screen corresponds to your local voltage.
8. Provide proper adult supervision when using the screen around children.
9. Do not disassemble the screen. Doing so may cause further damage to the screen and will void the warranty. If the screen needs repairing, contact the dealer from whom the screen was purchased.
10. We strongly suggest that this item should be fitted by a professional, we will not be held responsible for any loss, incidental or consequential damage.


SETTING UP THE SCREEN

1. Carefully unpack the screen.
2. Always handle the screen in a levelled position on a clean surface.
3. In order to protect the screen from exposure to stains, keep the screen out of contact with foreign objects such as dust, saw dust, and/or liquids
4. According to venue and projecting requirements, fix up the wall shelf securely. (Note that the two wall shelves must at the same level, otherwise screen surface will decline to one side)
5. Hang the screen on the wall shelf.
6. Once the direction red light shows on the switch box after the power on, start up the up and down switch on the switch box, the screen should adjust accordingly.
7. Remote / manual dual-use type, you can control the screen in different ways according to your choice.

NOTE: IF YOU WISH TO CHANGE THE PLUG/CABLE, WE STRONGLY ADVISE THIS HAS TO BE CARRIED OUT BY A PROFESSIONAL.
THE SOCKET OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE

POSITIONING THE SCREEN

It is advised that you position the screen where there isn't any direct light. The more light that hits the screen, the more blurry the image will look. Keep the screen horizontal at all times during installation.

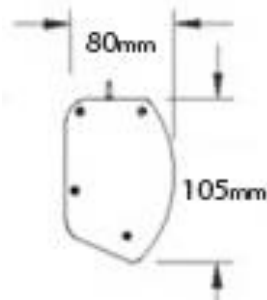


Wall mounted

Remove the screws that secure the end caps. The end cap can then be removed from the housing. Slide the brackets in and insert the end caps on again.

Ceiling style:

Remove the screws that secure the end caps. The end cap can then be removed from the housing. Slide the brackets in and insert the end caps on again. When you need to hang projection screen on the ceiling, you should install two pieces of pothooks at the corresponding position on the ceiling first, then latch on hanging jack which is on the end cap of projection screen.

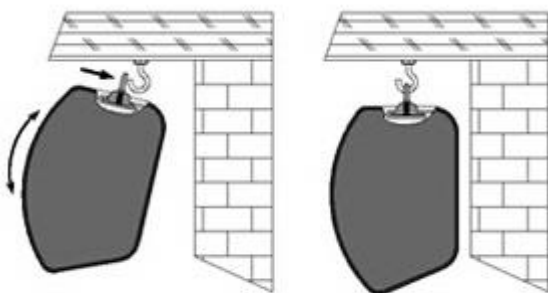

NOTE: NO MATTER WHAT KIND OF METHOD OF INSTALLATION, HAVE TO MAKE THE ENOUGH PLACE TO DRAW BACK THE SCREEN, AFTER YOU USED THE SCREEN PLEASE CLOSE THE SCREEN AFTER YOU USED THE SCREEN , PLEASE CHECK THE FABRIC OF SCREEN , WHETHER IT HAVE DUST AND DIRT. IF IT HAS THIS, PLEASE CLEAN BY THE SOFT BRUSH.

USING THE SCREEN

Operating Instructions

To lower the screen, simply press the DOWN button on the switch.

However, lowering or raising, when the screen reaches its desired height, press the stop button.

To alter the screen height, or retract the screen back into its housing, simply press the UP button on the switch

NOTE: IMPROPER USE OR MANUALLY PULLING THE SCREEN RETRACTS WILL INVALIDATE ANY WARRANTY. DO NOT RUN THE SCREEN CONTINUOUSLY FOR ABOVE 5 MINUTES, THIS MAY DAMAGE THE MOTOR DUE TO OVERHEATING. IT IS ADVISED THAT YOU WAIT UNTIL THE MOTOR COOLS DOWN.

Troubleshooting

If the electric screen does not move, please check the following:

1. Check the power supply and fuse first. The screen will not move without power.
2. Make sure the power cord is plugged to the power outlet.
3. Check all cable connections to see if any may be disconnected.
4. If the screen works well with the line switch but not with the remote control, please make sure the remote controls have batteries or replace them with new ones

ADDITIONAL INFORMATION

Cleaning the screen

If you want to get the most use of the projector screen, you must clean it on a regular basis. It is important that you clean the screen the right way.

Depending on the fabric, different instructions may apply.

Try to avoid touching the screen with your hands

Matt and fibre Glass Fabrics

With a soft clean rag, slightly dust off your projector screen. It is recommended to follow this process every one to three days.

Glass Bead Fabric

We advise that you clean the screen on a daily basis.

Unfortunately you cannot use any cleaning solutions to clean glass bead screens as these will damage the surface. We recommend that you use a dry cloth to clean the screen.

<p>NOTE: IT IS STRONGLY RECOMMENDED NOT TO USE ANY DETERGENTS, ABRASIVES OR SOLVENTS AS MANY OF THESE CHEMICAL SOLUTIONS CAN FADE YOUR SCREEN</p>
--

WARRANTY AND COPYRIGHT INFORMATION

Warranty


All items come with a **1 year warranty** covering manufacturing defects only. This warranty excludes any damage caused by the user. If your item develops a fault due to a manufacturing defect during this period please contact us.

Please note that proof of purchase will be required for any claims made.

Copyright

Copyright © Luxburg Visual, all right reserved. This document must not be reproduced or distributed.

Disposal

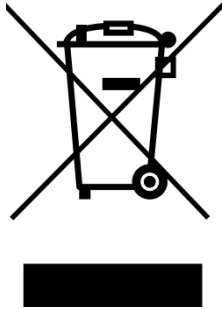

Disposal of Electrical & Electronic Equipment (Applicable throughout the European Union and other European countries with separate collection programs). The product should not be treated as general waste when you wish to dispose of it. It should be handed to an application collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent negative consequences to the environment and human health which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help conserve natural resources.